
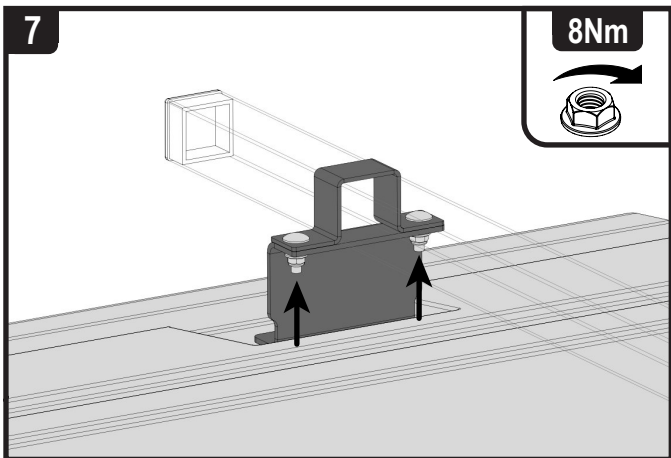
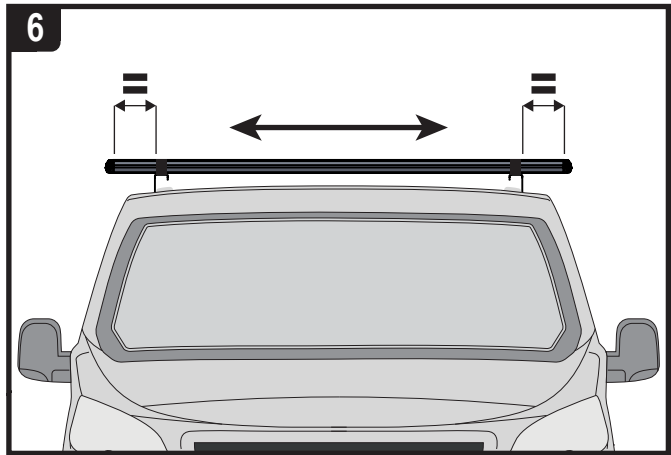


AR5342-L

2 Steel-Line Roof Bars


Ford Transit Custom 2012>

Installation Guide

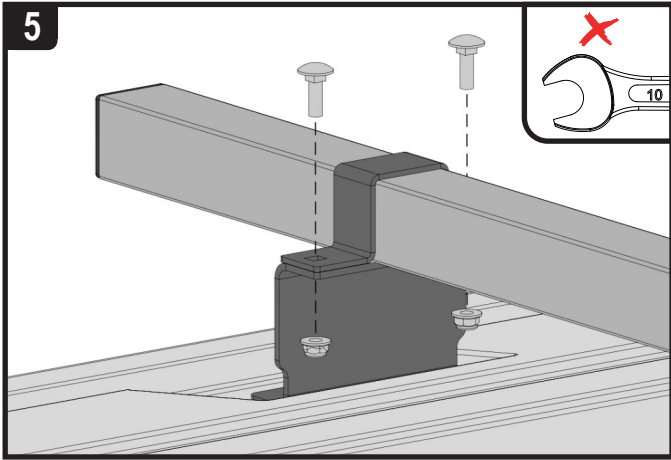

Kit Contents


FX4020 X8
(M8)

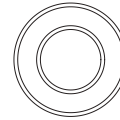


FX4016 X8
(M6)




FX4019 X8
(M8)




FX4018 X8
(M8X20)

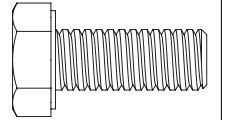


4500 X4




FX4042 X8
(M6X16)




MA6022 X4




ME0772 X2

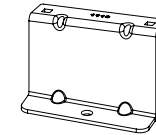

ME0773 X2

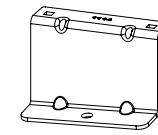

3197 X2

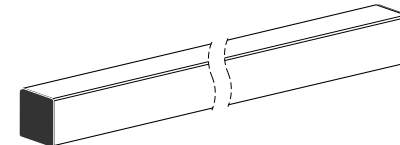

1

